

RESPONSE USER GUIDE

Squeeze button to activate gas lift (this adjusts the height of the chair)

Rotate handwheel to increase or decrease the tilt tension (for when chair is in "float mode")

Squeeze button to activate synchron function (seat and back angle). The chair can be locked in position or left in "float mode" *

Press and hold button to activate seat slide (forwards and backwards). When seat is in desired position, release the button to lock



Press button to activate arm height adjustment and release when arm is in desired position



* **Anti Shock Synchron Mechanism**

When synchron is unlocked it is necessary to lean back in the chair to activate this function – this is a safety feature and is designed to prevent the backrest from slamming forward if inadvertently activated