
www.teknikoffice.co.uk

Teknik

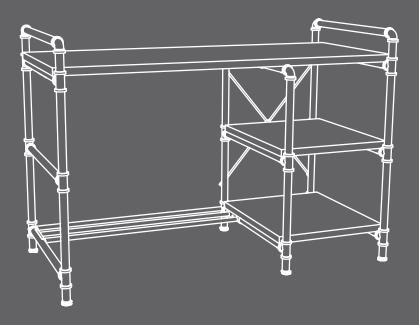

For **all** your newfangled **gadgetry**.

Iron Foundry Desk

Model 5423505

NOTE: THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION.

PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Table of Contents

Assembly Tools Required

Hardware Identification 2

Part Identification 3


Assembly Steps 4-8

Français 9-10

Español 11-12

Safety 13-14

 Warranty 15

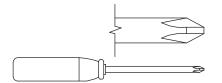

No. 2 Phillips Screwdriver Tip Shown Actual Size



Skip the power trip. This time.

Hardware Identification


Screws are shown actual size. You may receive extra hardware with your unit.





 BLACK 1-3/4" MACHINE SCREW - 2



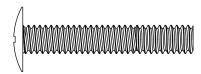

(3) BLACK 1-7/16" TAPERED MACHINE SCREW - 14







BLACK 3/8" MACHINE SCREW - 6





5 BLACK 1/2" PAN HEAD SCREW - 4






Part Identification




While not all parts are labeled, some of the parts will have a label or an inked letter on the edge to help distinguish similar parts from each other. Use this part identification to help identify similar parts.


Α	RIGHT END (1)	
В	LEFT END (1)	
С	UPRIGHT (1)	
D	TOP (1)	
Е	SHELF (2)	
G	UPPER BRACE (1)	
Н	CROSS BRACE (1)	
J	LOWER TUBE (1)	
K	LOWER BRACE (1)	
	B	

- Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- NOTE: Do <u>not</u> completely tighten the SCREWS in this step.
- Fasten the BRACES (G and K) to the UPRIGHT (C). Use three BLACK 3/8" MACHINE SCREWS (4).

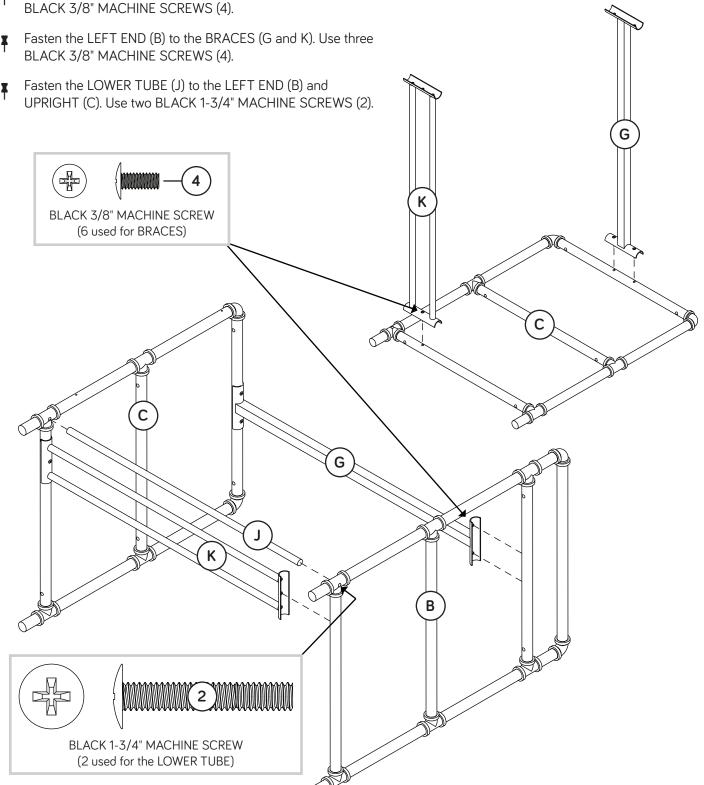


 - NOTE: Do <u>not</u> completely tighten the SCREWS in this step.
- Fasten the TOP (D) to the ENDS (A and B) and UPRIGHT (C). Use six BLACK 1-7/16" TAPERED MACHINE SCREWS (3).

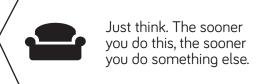

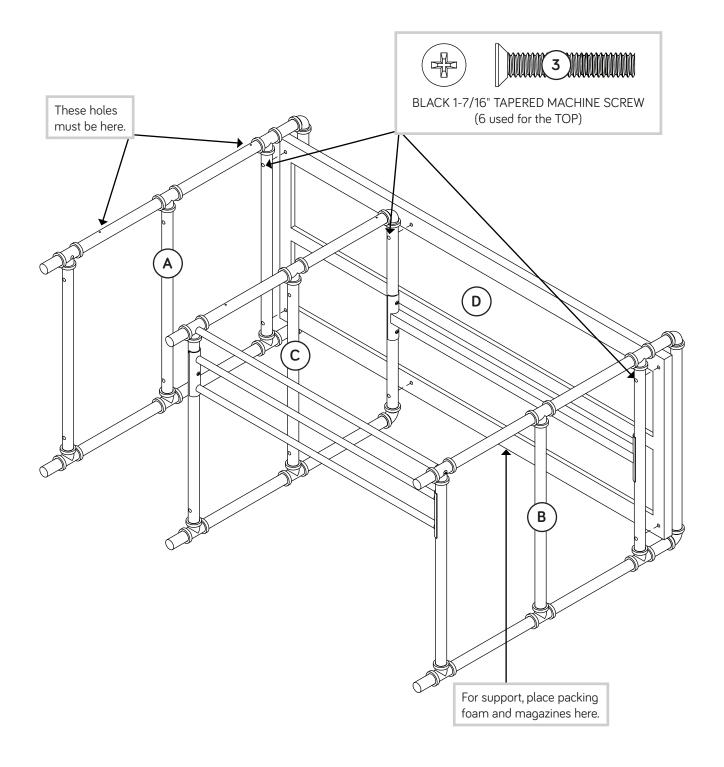



- Fasten the SHELVES (E) to the RIGHT END (A) and UPRIGHT (C). Use eight BLACK 1-7/16" TAPERED MACHINE SCREWS (3).
- Completely tighten all of the SCREWS in the metal frame.

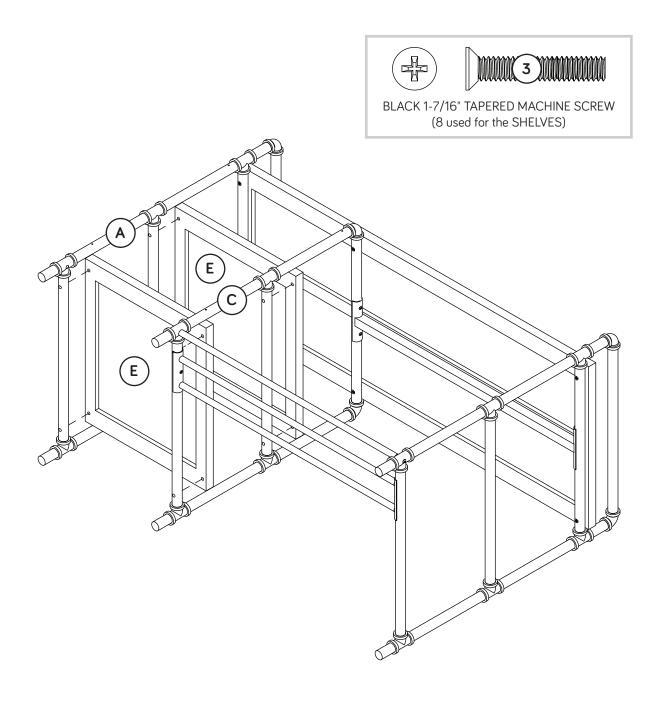


Fasten the CROSS BRACE (H) to the RIGHT END (A) and UPRIGHT (C). Use four BLACK 1/2" PAN HEAD SCREWS (5).

 Turn six LEVELERS (1) into the bottom edges of the ENDS (A and B) and UPRIGHT (C).

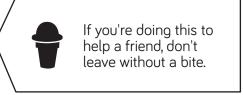

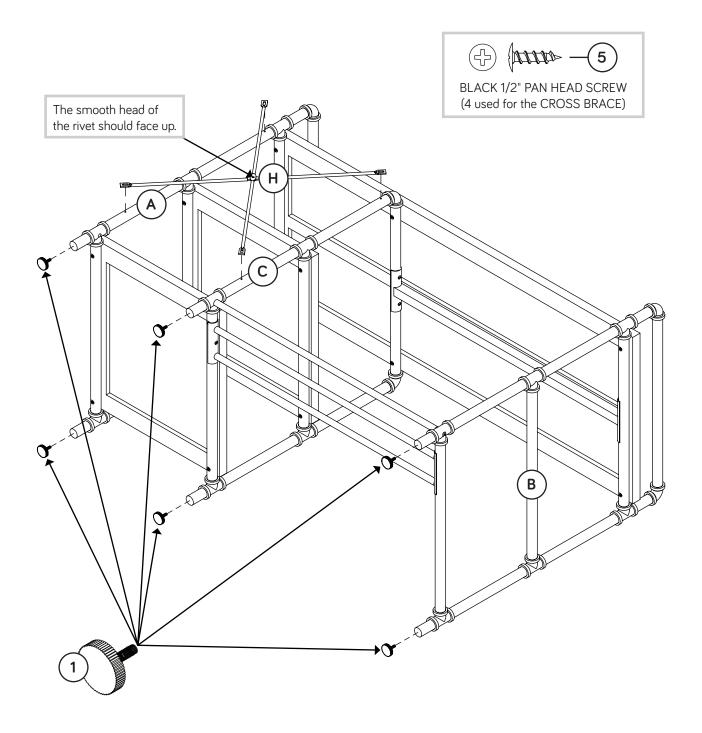

- Carefully stand your unit upright.
- **▼** To level your unit, turn the LEVELERS.
- NOTE: Please read the back pages of the instruction booklet for important safety information.
- This completes assembly. Clean with a damp cloth. Wipe dry.

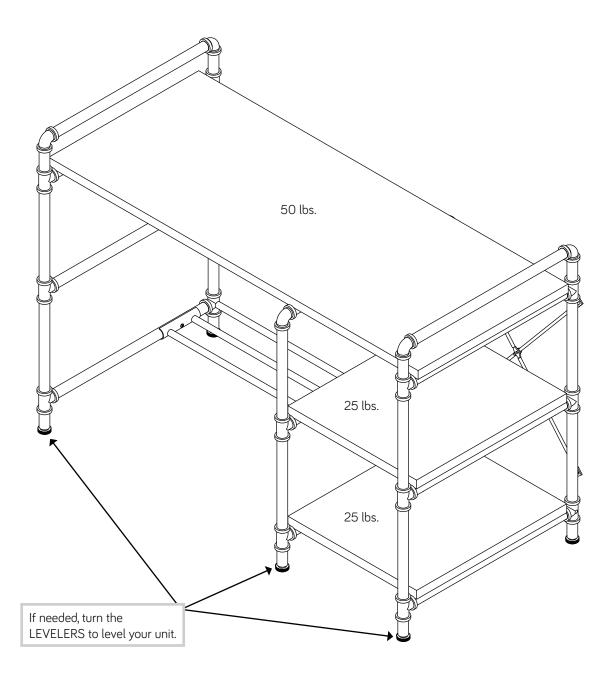

WARNINGPlease use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items. *Carefully read the following chart.* Look out for: What can happen: How to avoid the problem: • Overloaded shelves or drawers. • Risk of injury. • Never exceed the weight limits shown in • Improper loading can cause the product • Top-heavy furniture can tip over. the instructions. • Overloaded shelves and drawers can • Work from bottom to top when loading to be top-heavy. shelves and drawers. Place the heavier items on the lower shelves or in lower drawers. • Improperly moving furniture that is not • Furniture can tip over or break if • Unload shelves and drawers from top to designed and equipped with casters. improperly moved. bottom before moving the unit. • Physical injury. Furniture can be very • Do not push furniture, especially on a heavy. carpeted floor. Have a friend help you lift the item and set it in place. • Breakage of tops - particularly with double pedestal furniture (drawers at both • Provide support to the center section of the top when lifting the furniture. • Placing TVs on furniture items that are • Risk of injury or death. TVs can be very • This product is not designed to support a not designed to support a television is heavy. Plus the weight and location of the television. hazardous. picture tube tends to make TVs unbalanced and prone to tipping forward.